



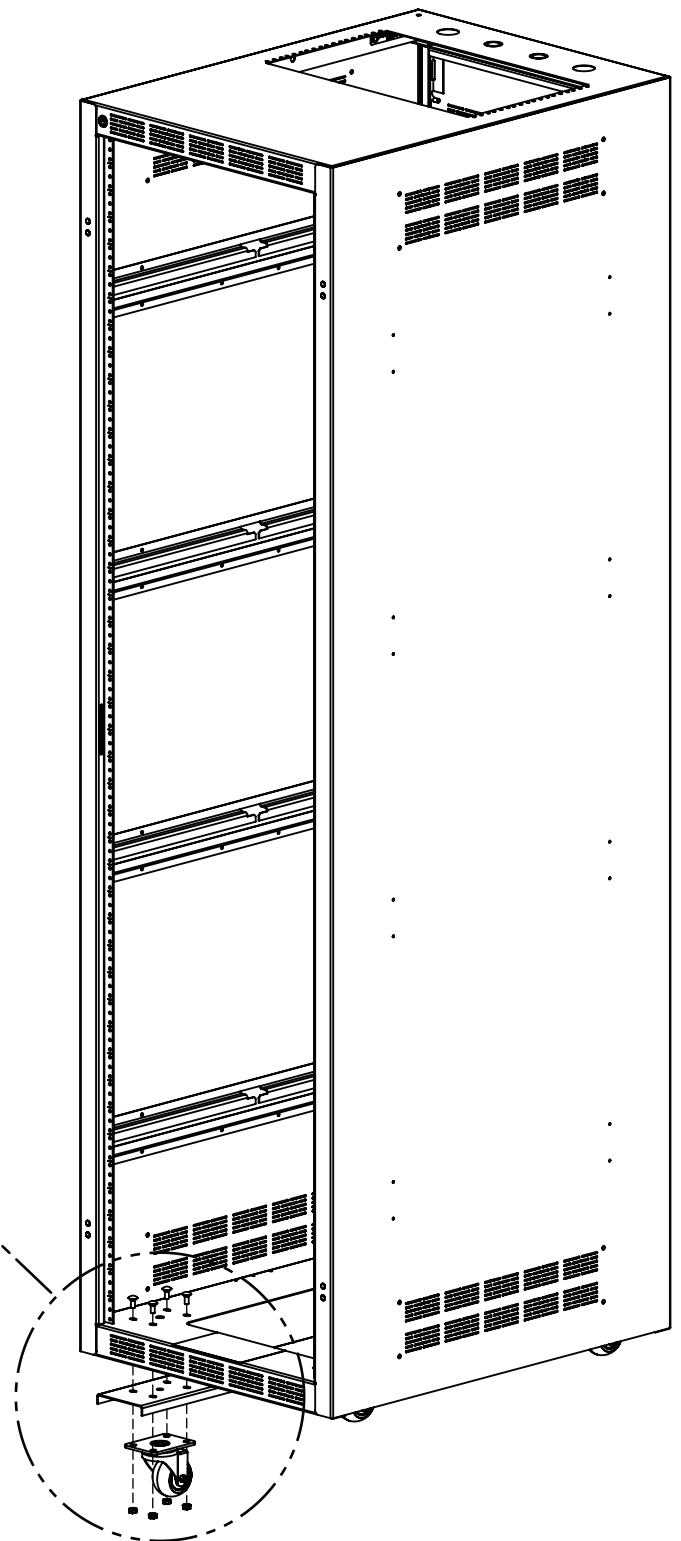

INSTALLATION NOTES:

1. THE 1/4-20 CARRIAGE BOLTS GET INSTALLED FROM THE INSIDE OF THE CABINET.
2. THE BRACKETS AND CASTERS MOUNT UNDERNEATH THE CABINET WITH THE BRACKET FLANGES FACING DOWN. THE BRACKETS ARE DESIGNED TO EXTEND FROM THE FRONT OF THE CABINET TO THE REAR OF THE CABINET.

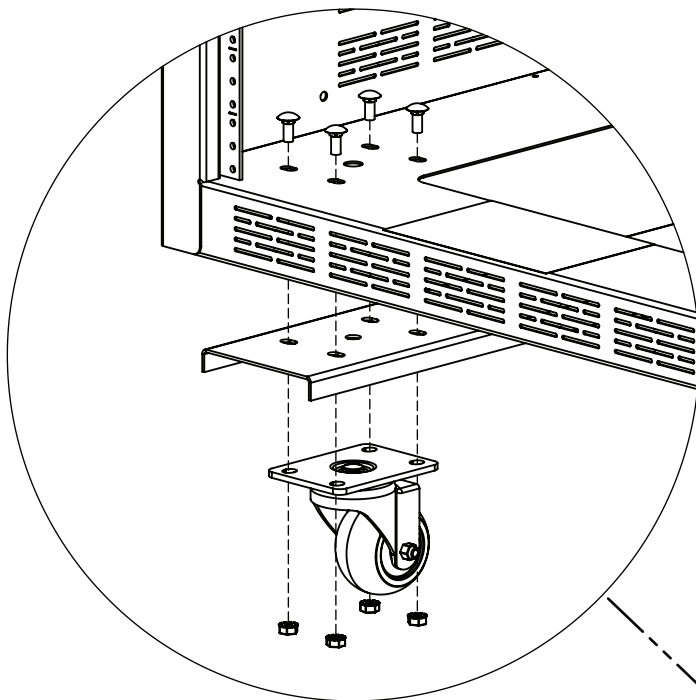

Specifications are subject to change without notice



**Atlas
Sound**

AtlasSound.com